



U.S. Department
of Transportation
Federal Aviation
Administration

Advisory Circular

Subject:

Date: 8/15/89
Initiated by: AFS- 340

AC No: 20-37D
Change:

AIRCRAFT METAL PROPELLER
MAINTENANCE

1. PURPOSE. This advisory circular (AC) provides information and describes maintenance procedures for service **personnel** to minimize failures and extend the service life of aluminum alloy aircraft propellers.
2. CANCELLATION. AC 20-37C, Aircraft Metal Propeller Blade Failure, dated July 15, 1980, is **cancelled**.
3. DISCUSSION. There is a margin of safety incorporated into the design of aircraft propellers. However, despite the safety factors engineered into propellers, partial or complete blade failures continue to occur. Federal Aviation Administration (FAA) data on propeller **failures indicates** that failures occur across the entire spectrum of aircraft/engine/propeller combinations; The propeller maintenance information contained in this AC can provide maintenance personnel with information and techniques to reduce these failures and increase the service life of a propeller.
4. PROPELLER DESIGN AND CAUSES OF FAILURE. An aircraft **propeller produces** thrust by converting engine horsepower into a mass movement of air. During normal operation, the propeller is subject to at least four separate stress loadings: thrust, torque, centrifugal force, and various aerodynamic forces. A properly maintained propeller is designed to perform normally under these loadings, but when additional stresses are imposed on it during operation, the design margin of safety can become greatly reduced. Propellers can become overstressed and fail because of direct mechanical damage from rocks, gravel, or debris. Most of these injuries tend to be sharp-edged nicks and scratches created by the displacement of material from the blade surface. This small-scale damage tends to concentrate stress in the affected area, and eventually, these high-stress areas **may** develop cracks.. As a crack propagates, the stress- becomes more and more concentrated, increasing crack growth, and in all probability, the growing crack will result in blade failure. Many other types of damage, such as corrosion of blades, propeller/ground strikes, and mechanical failures in the blade clamp or hub area, can also cause propellers to fail or become unairworthy.
5. BLADE DAMAGE CLASSIFICATION. The following lists the typical types of inservice damage to aluminum alloy propeller blades.
 - a. Corrosion. Corrosion on metal propeller components can be classified into three distinct types:

(1) Surface. Surface loss of metal due to chemical or electrochemical action, with visible oxidation products usually having a contrasting color and texture to the base metal.

(2) Pitting. Pits may be present under decals or blade overlays. These consist of visible cavities extending inward from the metal surface. In severe cases; pits can extend under the blade surface and reappear at another location.

(3) Intergranular. This is sometimes called metal delamination or exfoliation. The presence of intergranular corrosion may be the result of alloy impurities.

b. Face Nonalignment. Blades are bent around the propeller's chord-wise axis and blades will not track.

c. Nick. A sharp notch-like displacement of metal usually found on leading and trailing edges.

d. Erosion. Loss of metal from blade surface by the action of small particles such as sand or water, usually present on the leading edge close to the tip.

e. Scratch. A superficial small cut on the blade surface, usually located on the flat side of propeller.

f. Score. A surface tear or break on a blade that has a depth and length ranging between a scratch and a gouge.

g. Gouge. A deep groove on a blade formed by a heavy pressure contact with a solid object.

h. Cut. A deep, long, and narrow metal loss formed by a glancing blow from a sharp-edged object.

i. Crack. An opening between two adjoining sections of a blade. Cracks can be started by cuts, nicks, or severe corrosion in the area.

j. Dent. A depression in the blade as the result of a direct impact from a solid object, usually found on the blade's leading edge.

6. INSPECTION, SERVICE, AND MINOR REPAIRS.

a. Propeller Blades.

(1) Inspections. Aircraft maintenance personnel should adhere to the following procedures during propeller inspections.

(i) Airworthiness directives. (AD's), propeller manufacturers' manuals, service letters, and bulletins specify methods and limits for blade maintenance, inspection, repair, and removal from service. When a manufacturer's data specifies that major repairs to a specific model blade or other propeller components are permitted, those repairs may be accomplished only by an appropriately certificated and rated propeller repair facility. All other propeller blade maintenance and minor repairs, such as removal of minor nicks,

(v) A crack in a blade may be discovered during the process of repair. Any chordwise crack or those present on a leading or trailing edge cannot be repaired. The presence of this type of crack indicates that blade failure is virtually certain at any time. Propellers with this type of damage are unairworthy and must be removed from service and clearly identified as unairworthy. Prior to returning any blade to service after minor repairs, the reworked area should be inspected with at least a 10 power lens to ensure that any sharp notches at the bottom of the damage have been removed. In any case, where a developing crack is suspected in the bottom of the repair, inspect the repair using the propeller manufacturer's approved dye penetrant or fluorescent penetrant method. The use of acid etching and anodizing for detection of cracks should be limited to approved propeller repair facilities due to the special facilities required for these processes. The repair of propeller blades by peening over the edges of damaged areas is not authorized since this method will prestress the damage and, in all probability, lead to a fatigue crack. The repair of blades by welding or heating is not authorized, as the high strength of the original aluminum forging will be significantly reduced by those procedures.

(vi) Accurate propeller tracking requires chocking the aircraft in a stationary position and ensuring that the engine crankshaft is tight against the thrust bearing. A blade tracking datum can be made simply by placing a block on the ground in front of the aircraft in the propeller arc. Raise the block as required to obtain a clearance between the blade tip (prop blade vertical) and datum block not exceeding 1/8-inch. Scribe a line on the block next to the blade tip position. Pull all the blades past the scribed datum. No blade should deviate more than 1/16-inch from the plane of rotation as defined by the scribe mark. When inspecting the propeller track, blades should be gently rocked to detect any possible looseness. Propeller blades exhibiting any looseness or out-of-track conditions exceeding 1/16-inch should not be returned to service without inspection/repair by an appropriately rated propeller repair facility.

b. Propeller Hub.

(1) Fixed Pitch.

(i) Inspection procedures require removal of the propeller spinner for examination of the prop hub area. Cracks may be present in the hub area between or adjacent to bolt holes and along the hub pilot bore. Cracks in these areas cannot be repaired and require immediate scrapping of the propeller.

(ii) Propeller attach bolts should be examined for looseness or an unsafetied or cracked condition. Cracked or broken bolts are usually the result of overtorquing. Correct torquing procedures require all bolt threads to be dry, clean, and free of any lubrication prior to torquing.

(2) Controllable Pitch.

(i) Complete inspection/servicing requires the removal of the spinner for examination and servicing of the propeller hub and blade clamp area. All inspection and servicing of the pitch control mechanism should follow the recommendations of the propeller, engine, and airframe manufacturer. All propeller AD's and manufacturers' service bulletins must be checked for compliance.

(ii) The hub, blade clamps, and pitch change mechanisms should be inspected for corrosion from all sources, including rain, snow, and bird droppings that may have entered through spinner openings. Examine the hub area for oil and grease leaks, missing lubricaps, and leaking or missing zerk fittings. When servicing the propeller thrust bearings through zerk fittings in the blade clamps, the rear zerk fitting on each clamp must be removed to avoid extruding grease past the bearing grease seal and damaging the seal. Lubricaps should then be pressed over the ends of all zerk fittings.

(iii) Propeller domes should be checked for leaks both at the seals and on the fill valve (if so equipped). The dome valve may be leak-tested by applying soapy water over the fill valve end. Domes should be serviced only with nitrogen or dry air in accordance with the **manufacturer's recommendations**. When propeller domes are inspected and found filled with oil, the propeller should be removed and inspected/repared by an appropriately rated repair facility.

(iv) Fiber block pitch-change mechanisms should be inspected for deterioration, fit, and the security of the pitch-clamp forks.

(v) Certain models of full-feathering propellers utilize **spring-loaded pins** to retain the feathered blade position. Spring and pin units should be cleaned, inspected, and relubricated as per the manufacturer's recommendations and applicable **AD's**.

(vi) Pitch change counterweights on blade clamps should be inspected for security, safety, and to ensure that adequate counterweight clearance exists within the spinner.

7. PROPELLER MAJOR REPAIR AND OVERHAUL.

a. Periodic Reconditioning. A number of factors will require returning 'a **propeller** to an appropriately rated and certificated propeller repair facility for service, repair, or overhaul. Some propeller manufacturers recommend a periodic reconditioning of some fixed-pitch models at specified service time intervals to prevent blade failure from surface stress fatigue. This requires the propeller to be returned to the manufacturer for removal of a thin layer of surface metal to restore the propeller to the original unstressed condition. Fatigue cycles generated by some engine/propeller combinations can require manufacturer reconditioning intervals as often as every 500 hours of operation. Other propeller makes and models are required by AD's to be overhauled or partially disassembled for service or lubrication. In most cases, this requires that the propeller be returned to an appropriately certificated repair facility.

b. Service Personnel Limitations and Responsibilities. Federal Aviation Regulations (FAR) Section 65.81 specifically excludes certificated and rated mechanics from performing major repairs and/or major alterations on aircraft propellers. In this regard, FAR Part 43, Appendix A, Paragraphs (a) (3) and (b)(3) define what major alterations and repairs are to propellers. However, FAR Part 145 provides that properly certificated and rated repair stations may perform such major repairs or alterations provided the work is done in accordance with technical data approved by the Administrator. Part 145 also specifies the personnel and other requirements applicable to such repair stations. In addition to complying with AD's, service personnel should review all applicable manufacturers' service bulletins, manuals, and other information on the propeller being inspected. While compliance with propeller manufacturers' service

bulletins is not mandatory, in many cases, they specify more rigorous limits on repair or inspection than are described by FAA-recommended practices. It is recommended that manufacturers' service bulletins receive the most careful consideration during the inspection **process**.

8. TACHOMETER INSPECTION. Due to the exceptionally high stresses that may be generated by particular propeller/engine combinations at certain engine revolutions per minute (RPM), many propeller and aircraft manufacturers have established areas of RPM restrictions and other restrictions on maximum RPM for some models. Some RPM limits have **never** exceed values as close as 3 percent of the maximum RPM permitted, and a slow-running tachometer can cause an engine to run past the maximum RPM limits. Since there are no post-manufacture accuracy requirements for engine tachometers, tachometer inaccuracy could be a direct cause of propeller failure, excessive vibration, or unscheduled maintenance. Tachometer accuracy should always be checked during normal maintenance intervals or sooner if indicators such as excessive vibration or aircraft performance changes might indicate inaccurate RPM readings.

9. PROPELLER BALANCING. Propellers can become **imbalanced** for a variety of reasons. There have been a number of instances where 'the process of moving an aircraft by pushing or pulling on the propeller blades has moved the blades to an out-of-track condition, creating an imbalance. Propeller **damage, however,** remains the major contributor to propeller imbalance. Unauthorized or improper repair of propeller spinners has also been identified as a cause of propeller imbalance. Propellers can be balanced **by** two methods: static balancing and dynamic balancing.

a. Static Balancing. Propellers can be properly statically balanced only by removing the propellers and evaluating the vertical and horizontal balance on a special fixture. Propeller static balancing should be accomplished only by a properly certificated and rated propeller repair facility.

b. Dynamic Balancing. Certain models of propellers may be dynamically balanced in place on the aircraft. When applicable, the aircraft maintenance manual will describe the specific procedures for adding dynamic balance weights. These are usually installed on the propeller spinner backing plate using specialized dynamic-balancing equipment to **determine exact** weight balance values. Unless the aircraft maintenance manual authorizes dynamic balancing for a specific model, propeller balancing should be limited to static balancing.

10. PROPELLER RECORDS. Maintenance records are a required part of a system of aircraft maintenance. Propeller maintenance recordkeeping responsibility is ultimately assigned to the owner/operator in accordance with FAR Part 91.165. Part 91.173(a)(2)(i) requires that a record of total time in service be maintained for each propeller. In some cases, lack of records may require recompliance with a particular propeller AD. Propeller logbooks are available from various sources, including the propeller manufacturer.

11. PROPELLER INSTALLATION. Propellers must **be** installed by **an** appropriately rated and certificated mechanic. Only the propeller manufacturer's bolt or nut torque requirements should be used for the installation. On some propellers, the correct installation torques may be **shown on** a propeller hub decal. When the propeller is correctly torqued, the **blade track should** be checked to the tolerances specified by this AC **or** the manufacturer's specifications, whichever is less. New or reconditioned propellers are required to have been statically balanced by the repair facility. However, if after installation the

propeller/engine combination runs rough (vibration) on the ground or in flight, the propeller should be removed and rotated 180 degrees on the engine crankshaft, reinstalled, and the blade track should be checked again. Certain propeller installations may require additional dynamic propeller balancing on the engine.' Paragraph 9b discusses the general guidelines of **dynamic** balancing. 'Propeller action and RPM parameters must be checked during **runup** and the installation inspected for leaks. Spinner assemblies should be inspected during installation in accordance with the propeller or aircraft manufacturer's guidelines. Inspect spinners and backplates for warping, cracks, looseness, missing parts, fasteners, improper repairs, or unauthorized modifications (including addition of balance weights). Any repair of a spinner must be carefully evaluated prior to return to service, since a repair that adds weight to a spinner can create imbalance.

12. PROP TIPS. Following these simple procedures for the care and use of a propeller can greatly increase its service life.

a. Do the Following:

(1) Perform a visual preflight inspection of the blades for nicks, scratches, stone cuts, erosion, and cracks.

(2) All damage found should be inspected by an FAA-certificated mechanic.

(3) Clean propeller blades with a nonalkaline cleaner and wax periodically using a quality-type automotive paste wax to prevent moisture penetration and the resultant corrosion..

(4) Wipe blades frequently using an oily cloth.

(5) Ensure that ~~the~~ tachometer is appropriately marked for operational limitations of the propeller and that the tachometer accuracy is checked at periodic inspection intervals.

(6) Make sure that the applicable installation, information, and warning decals are on the propeller. These decals may include warnings against pushing or pulling on the propeller, the model number, the correct bolt torque, and any other manufacturer's identification.

(7) Although a propeller overhaul may not be required by an AD, the operator should consider reconditioning or overhauling the propeller when it reaches the manufacturer's recommended service time.

(8) For safety and glare reduction, keep the blade backs painted flat black and the propeller tips painted with the appropriate warning colors.

(9) Leave two-bladed propellers in the 1 o'clock position to minimize bird droppings and water being retained in the spinner.

b. Do Not Do the Following:

(1) Do not operate any aircraft after a propeller has been subjected to an impact without a thorough inspection, including propeller tracking, if indicated.

(2) Never straighten a damaged propeller. Even partial straightening of blades to permit shipment to a certificated propeller repair facility may result in hidden damage not being detected and an unairworthy propeller being returned to service.

(3) Never repair any blade defect by welding, heating, or peening. No propeller manufacturer permits this as it can induce premature blade failure.

(4) Do not fill any damaged areas of the blades, even when properly repaired, with bulk-filler materials such as epoxy or auto body fillers. This prevents areas of potential cracking from being inspected and affects balance.

(5) Do not paint over areas of corrosion on blades. Corroded areas should be removed in accordance with approved procedures prior to applying any protective finish.

(6) Do not run up engines in areas containing loose rocks, gravel, or debris. Avoid quartering rear winds during ground **runup**.

(7) Do not push or pull on propeller blades when moving the aircraft by hand. Tow bars are specifically designed for this operation.

(8) Never install a propeller on an aircraft unless it is a model approved by the aircraft type certificate data sheet or an appropriate Supplemental Type Certificate, and the service history of the propeller can be documented.



D. C. Beaudette
Acting Director, Flight Standards Service

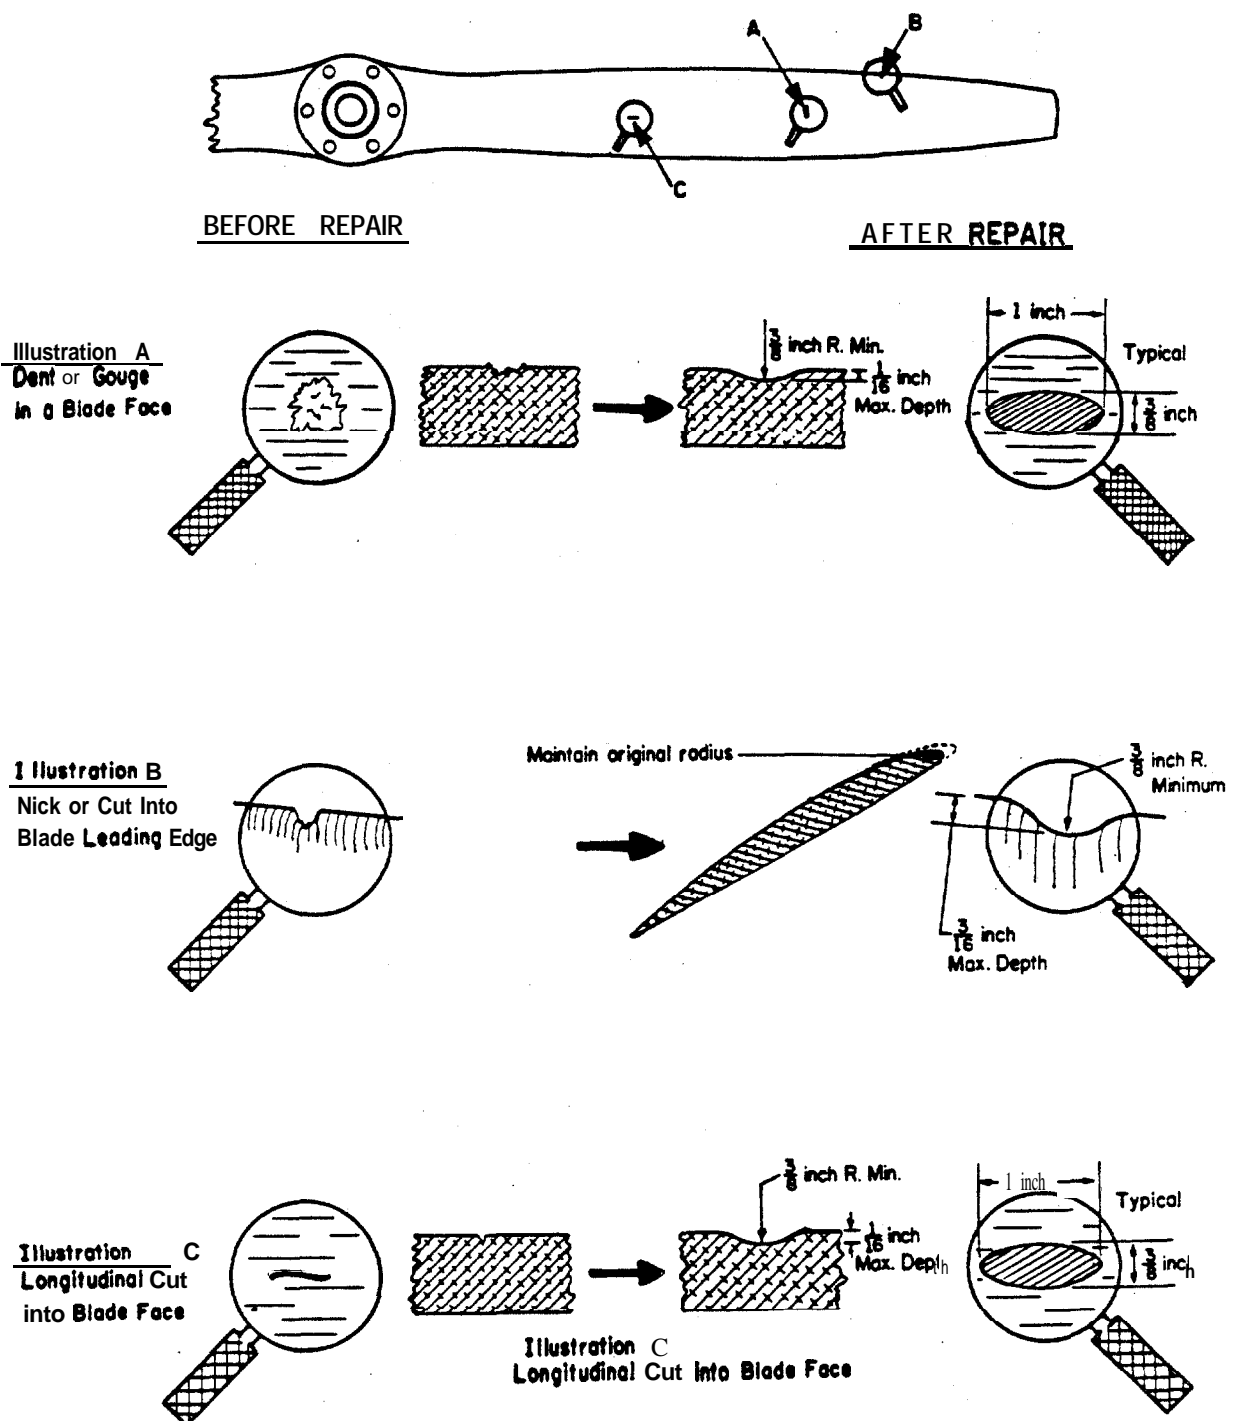


Figure 1. Techniques for Repair of Blade Damage

U.S. Department
of Transportation

**Federal Aviation
Administration**

800 Independence Ave., S.W.
Washington, D.C. 20591

BULK MAIL
POSTAGE & FEES PAID
FEDERAL AVIATION
ADMINISTRATION
PERMIT NO. G-44

**FORWARDING AND RETURN
POSTAGE GUARANTEED**

Official Business
Penalty for Private Use \$300